# Simple Card Key Issuance Program

# **ROOKEY Manual**

**USER** 



#### "Rookey" How to use the card key issuing program

**USER** 

### 1. Login


- Please inquire about applying for a new account.
- website: doorlock.checkin.co.kr

## 2. Screen Description

[ Issuing a Cardkey ]: This is the menu for checking registered rooms and issuing card keys.



- 1) Button: Detailed inquiry → You can check the room you want to check.
- 2) Detailed inquiry table: You can search according to room type, room floor, and number of rooms.

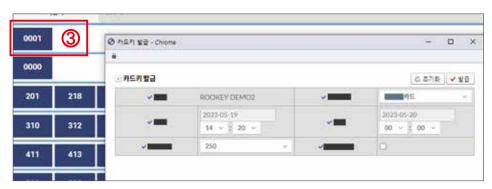

- 3) At the bottom of the detailed inquiry table: The room you have registered will be displayed, and when you click on it, a pop-up will be displayed.
- ※ Please refer to "3. How to issue a card key" for details

#### [ Cardkey details ]: This menu allows you to check and issue the issued card key.



- 1) Button: Initialize → Initialize the selection in the table below.
  - Inquiry  $\rightarrow$  Inquire the contents entered in the table below.
  - Card key reading/issuance → Click when issuing/reading card key.
- 2) Detailed inquiry table: You can search according to issuance type, room number, room type, issuance time, start date, and end date.

#### [ Room Settings ]: This menu allows you to register and view/modify your room.



- 1) Button: Initialize → Initialize the selection in the table below.
  - Inquiry  $\rightarrow$  Inquire the contents entered in the table below.
  - Add Row  $\rightarrow$  Add a row at the bottom of the table where you can enter new information.
  - Save  $\rightarrow$  Save the added and modified content in 'Add Row'.
- 2) Detailed inquiry table: You can inquire according to room number and room type.
- 3) Room inquiry list: You can check and modify the registered room.
  - Room number: Enter room number
  - Floor number: Enter the floor number corresponding to the room you are adding
  - Room type: Enter room type (Example Twin, Double, Triple, etc.)
  - Virtual Rooms: Virtual Rooms Status
  - Use status: Room availability

### 3. How to issue a card key

- \* Preparation: Door Lock Card Key / Issuer (Terminal, Reader) / Installation Program
- \* Please download and install the attached file like the manual.
- \* Please install it according to the number of operating system bits on the computer for setting the card key.  $(64 \to x64, x32 \to x86)$
- \* Check the computer's operating system bit You can find it in Win10 [Right-click on desktop > Display Settings > ① Information].




- Please put the card to be set on the reader like the picture next to it.
- Please check if the reader connected to the computer is working properly (Smarkham (left) - Green light / Lacos (right) - Red light)
- 1 Preparing your card terminal
  - → Set to connect to a particular computer
  - → Contact us if the program is not pre-installed/connected
- 2 Click card key to the card key (or room button (or room hose)
- ③ Select the card key type of function that needs to be set up



- → Setting card: Connecting new installation door lock to PMS
- → Customer, cleaning, emergency card: Available depending on specific space
- → Master card: Card key available for all rooms
- 4 Set the period, time, and room number for each purpose.
  - → When you click Issue after setting up, please check which device is connected.



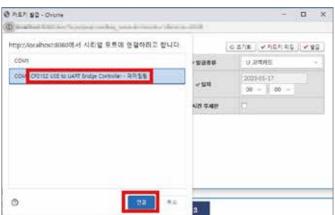

**Before Connecting** 

Select devices to connect to